VIC-20 EXPANDER

Four slots to enhance the VIC-20 with memory, utilities, and application cartridges. Convenient ON-OFF switches for individual slot control. Reset button for system restart. External power supply hook-up provided.

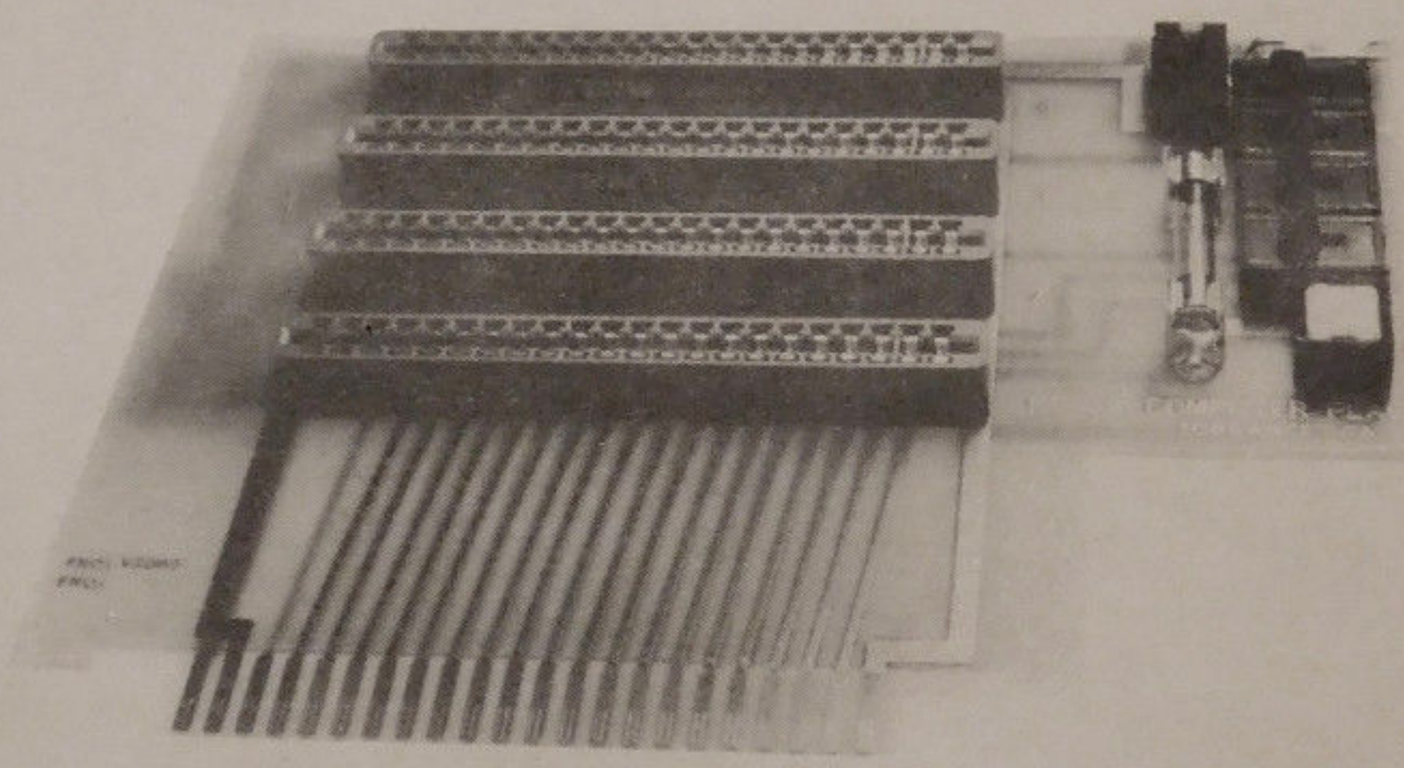

Computer Place

23914 Crenshaw Blvd., Torrance, CA 90505

VIC-20 is a registered trademark of Commodore Business Machines.

VIC-20 EXPANDER

INTRODUCTION

The CP VIC-20 Expander plugs directly into the VIC's Expansion Port. It allows you to expand your VIC-20 computer with memory, utilities, and application cartridges.

INSTALLATION INSTRUCTIONS

1. TURN OFF THE POWER. Failing to do so may cause serious damage to the computer.
2. Install the CP VIC-20 Expander by plugging it into the VIC's Expansion Port.
3. Set the power switch to VIC for VIC-20 power supply or to EXT for external power supply.
4. Plug in the cartridges of your interest into the slots.
5. Properly set the individual slot ON-OFF control switches. ON position (or toward the slot connector) is to enable the cartridge. OFF position (or away from the slot connector) is to disable the cartridge.
6. Turn on the external power supply, if you use one.
7. Turn on the VIC-20 power.
8. The VIC-20 should be ready now with all the enhanced power of the cartridges you installed and enabled in the slots.

OPERATION OF THE CP VIC-20 EXPANDER

A. TURN-ON/TURN-OFF the cartridge in slot

1). Set the corresponding slot ON-OFF control switch of the cartridge to ON/OFF position to enable/disable the cartridge.

2). Press the Reset button for a couple seconds and release.

B. Change the cartridge in slot

1). TURN OFF THE POWER of VIC-20 (and the external power supply, if there is one used.)

2). Change the cartridge.

3). Set the corresponding slot ON-OFF control switch.

4). Turn on the external power supply, if you use one.

5) Turn on the VIC-20 power.

Computer Place
23914 Crenshaw Blvd., Torrance, CA 90505

VIC-20 is a registered trademark of Commodore Business Machines.

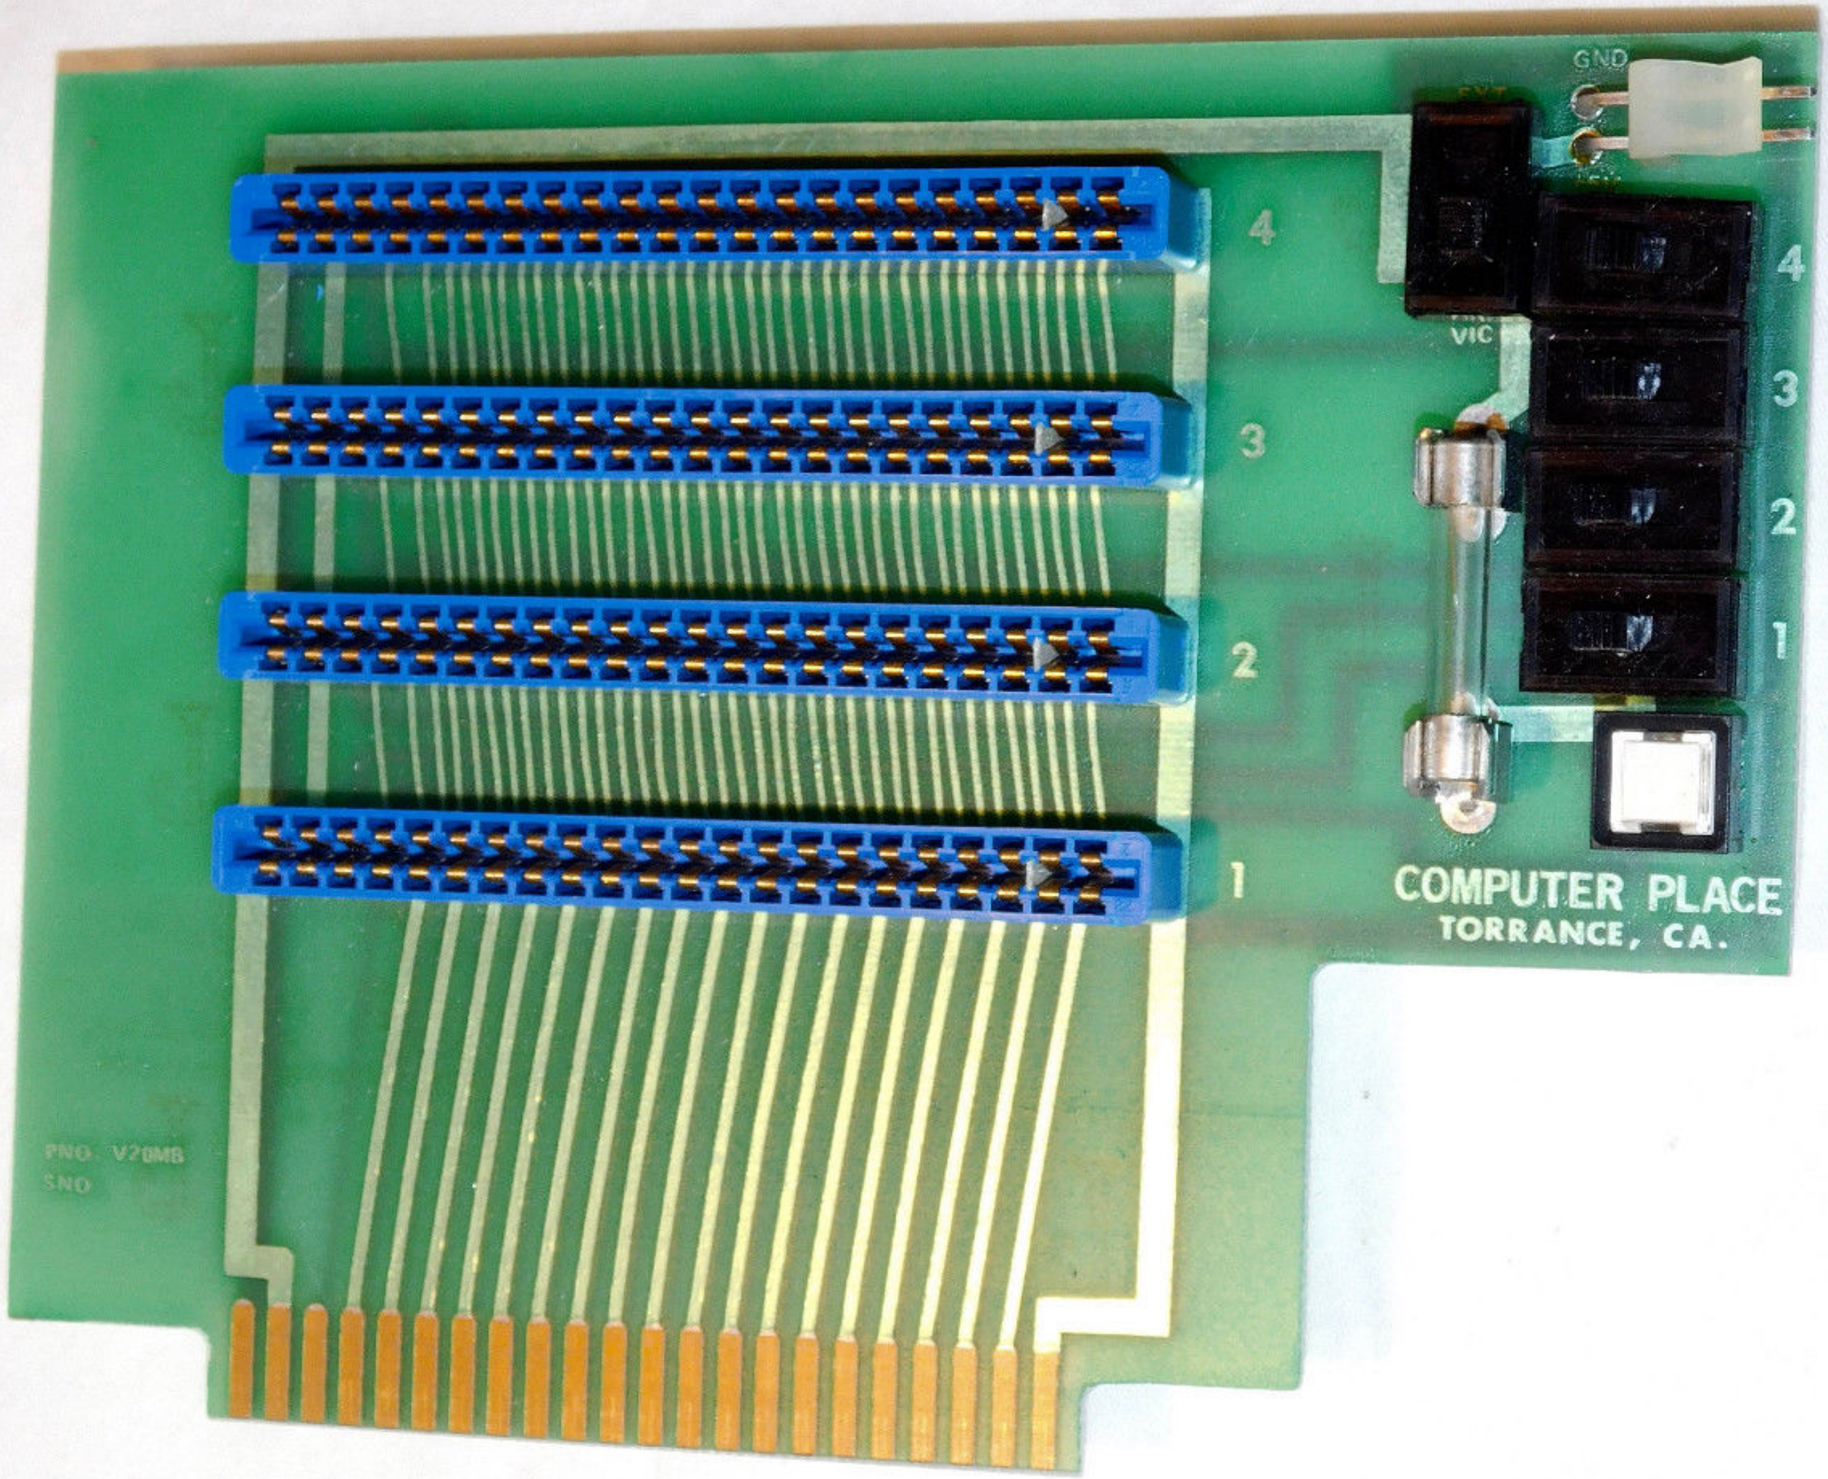
GND
VIC
4
3
2
1
COMPUTER PLACE
TORRANCE, CA.
PNO V20MB
SNO